




ASSEMBLY INSTRUCTION


Excellent 5 door TVC

A-10 (4x75mm)	B-14 (4x19mm)	C-10	D-01	E-02	F-01
					


G-01

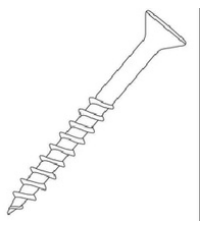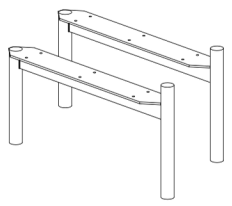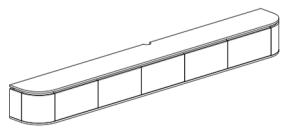


STEP - 01

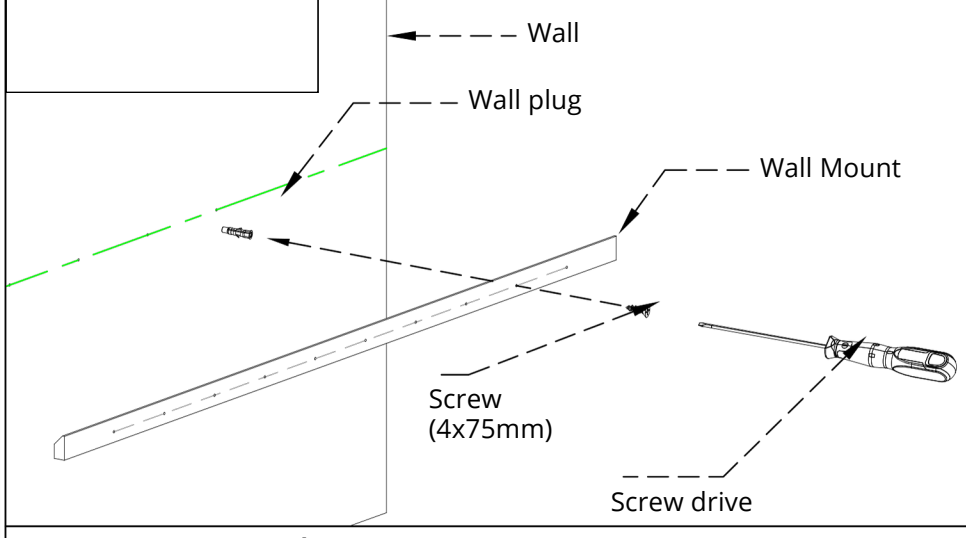


STEP - 02

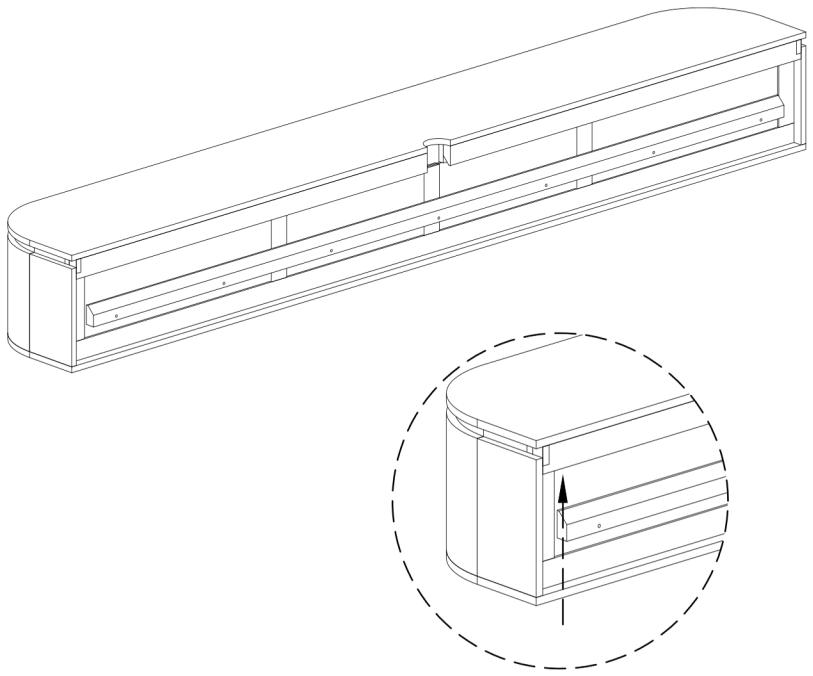

STEP - 03 (2nd option)

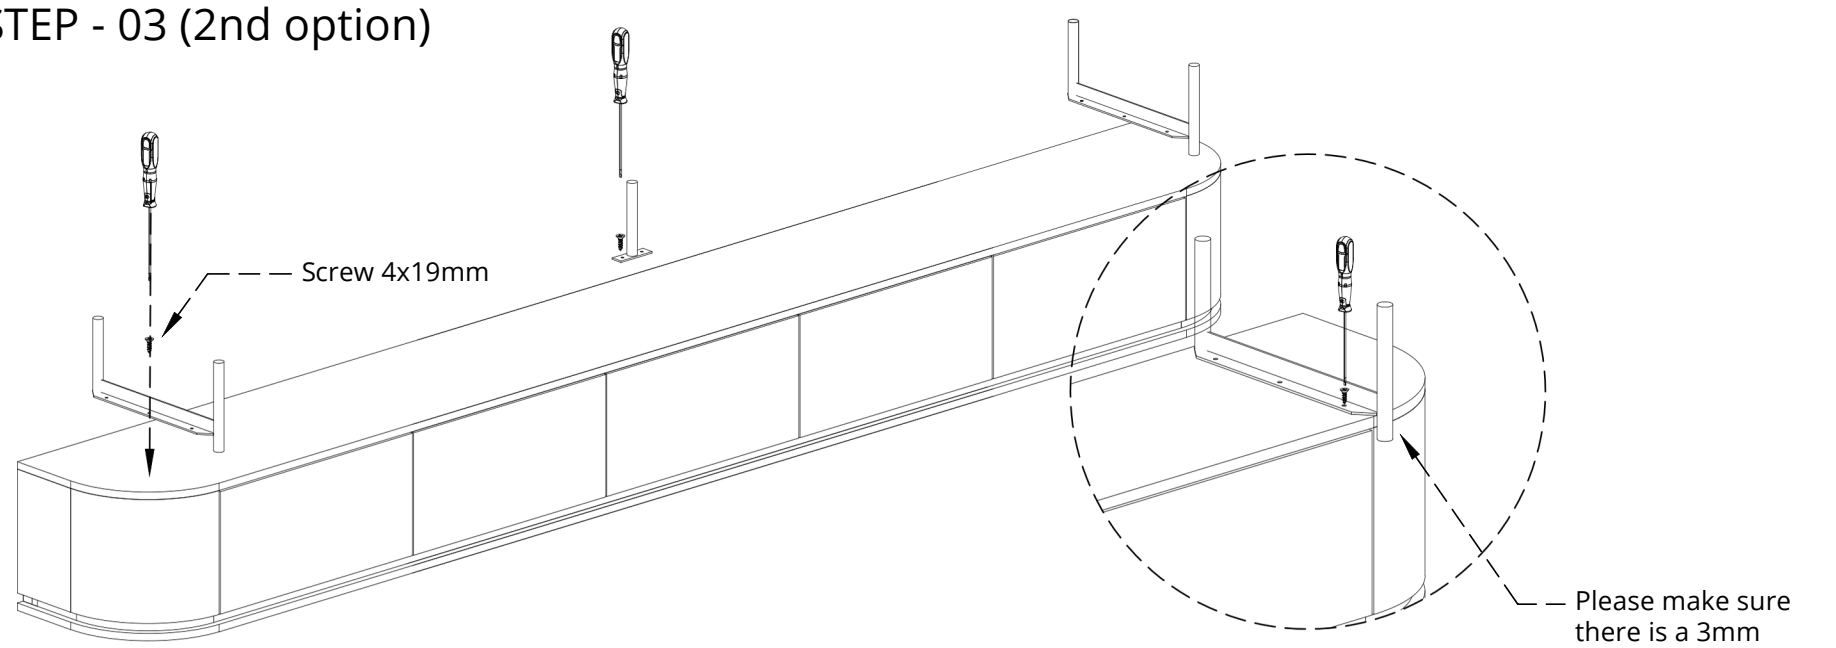

Final

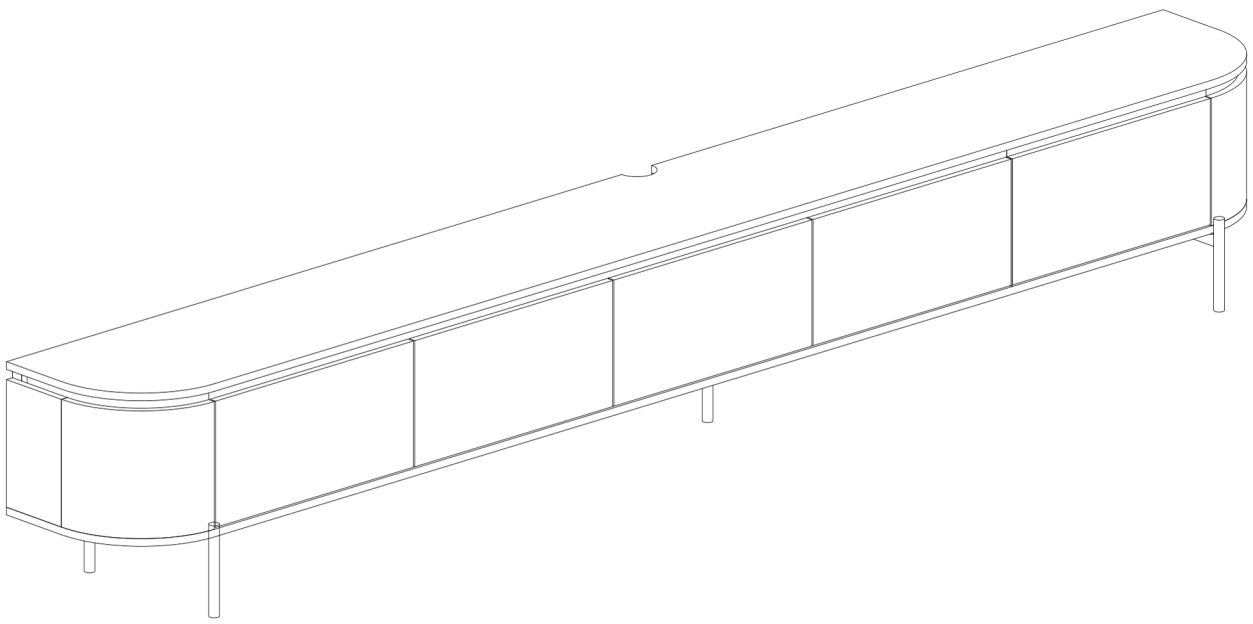

STAR FURN