
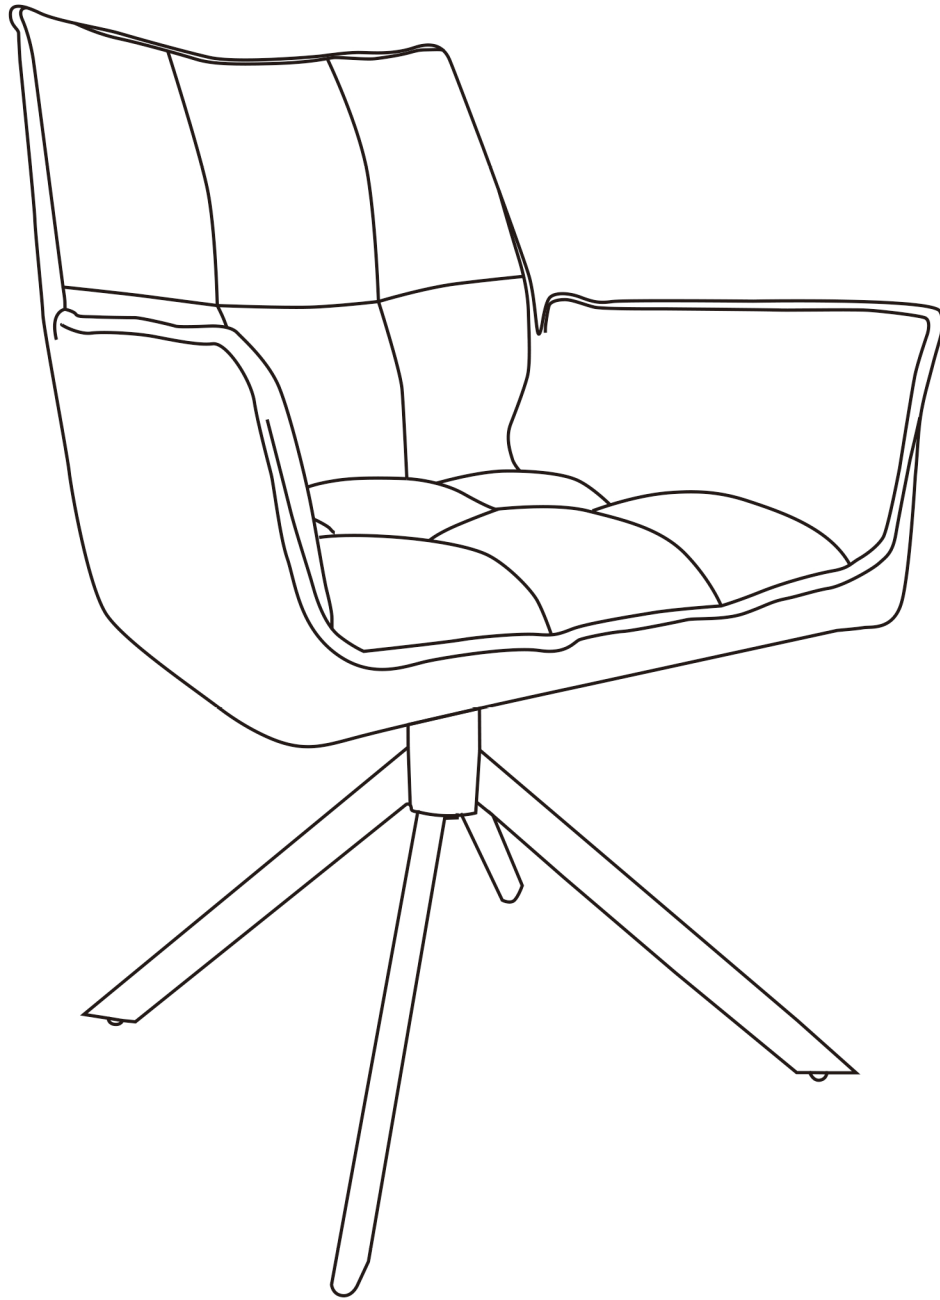





STAR FURN

High Quality Furniture





A x1 	B x1 	C x4 	D x1 	E x8  M6X12	F x4  M6X10
G x2  M6X25	H x2  M6X20	I x8  Ø18X6X1.5	J x4  M6	K x1  M4	


1

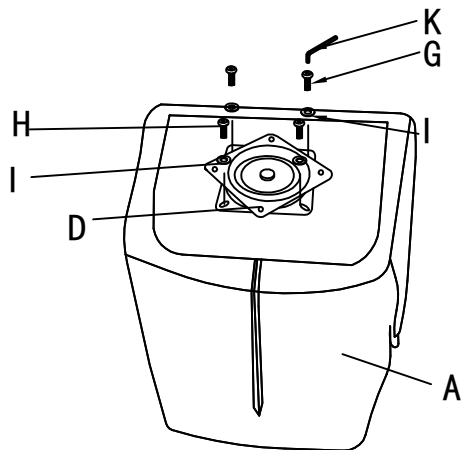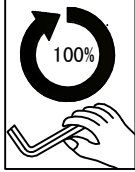


2

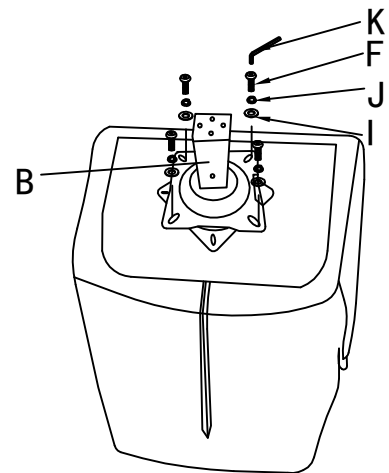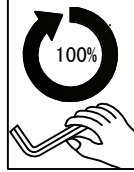

3

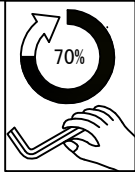

electronic drill is forbidden to use, please use wrench. For top and bottom screws, please use force of 70% firstly, then 100% fasten.

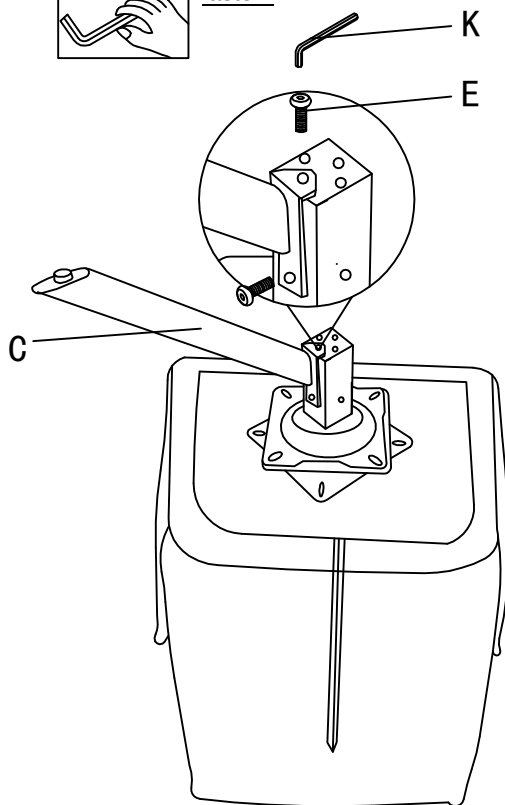

4

